



Apple Powerbook 520 General Disassembly

This guide will show you how to disassemble the computer so that you can get to the internal components.

Written By: Mark McNeff



INTRODUCTION


In order to obtain access to the internal components you must first follow this step by step general disassembly guide. This will be a first stop in installing a new component that is enclosed by the outer shell.

Step 1 — Apple Powerbook 520 General Disassembly




- Turn computer over.
- Remove battery expansion cover and battery.

Step 2

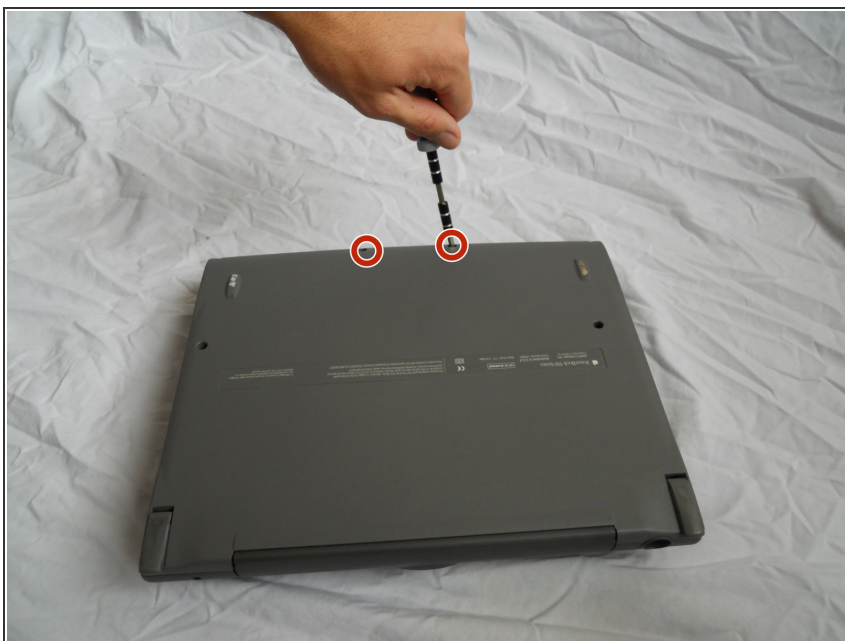

- With monitor hinge at the bottom, remove the two top center screws.

Step 3

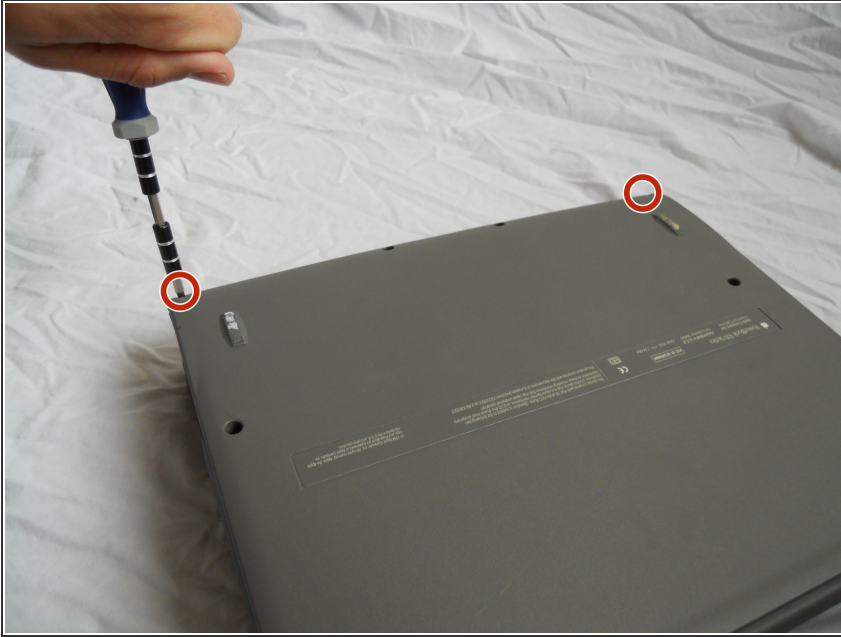

- Remove top left and top right screws.

Step 4



- Remove middle left and middle right screws.

Step 5





- Open computer kickstands.
- Remove screws underneath each kickstand.

Step 6



- Lift keyboard from bottom and take out of shell.

Step 7

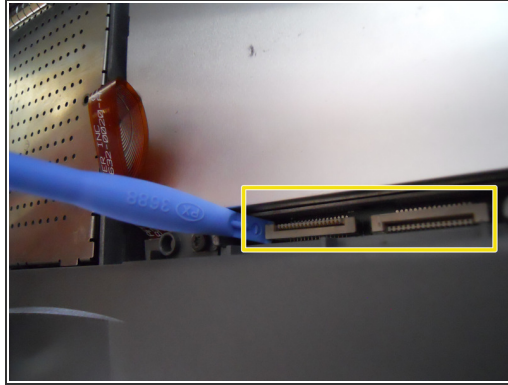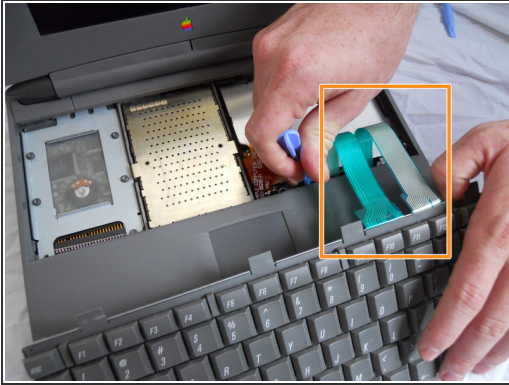

- Lift the white mechanism securing the keyboard ribbon cable to the motherboard. You can do this using a plastic opening tool.
- Remove both ribbon cables from the motherboard.
- From here you can access the logic board, hard drive, and floppy drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-24 08:32:44 AM.